 


**MIDEA
HEAT PUMP
280 LITRE**

**QUICK
START
INSTALLATION
GUIDE**

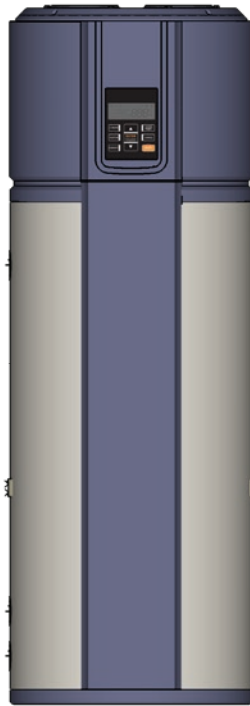

HEAT PUMP



FASCIA SECURING SCREWS



CONDENSING PIPE



AIR FILTER



UV SCREEN SHIELD

 


INSTRUCTIONS




RAIN COVER (WITH LEGS)


BOX CONTENTS

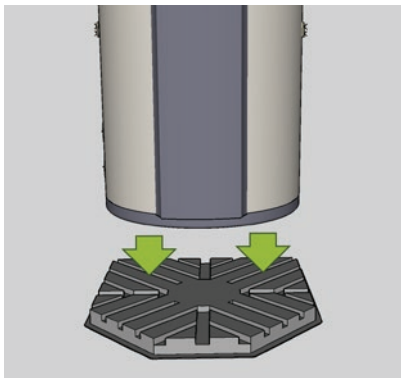

 Position unit on a flat sturdy surface able to bear the weight of a fully filled unit.

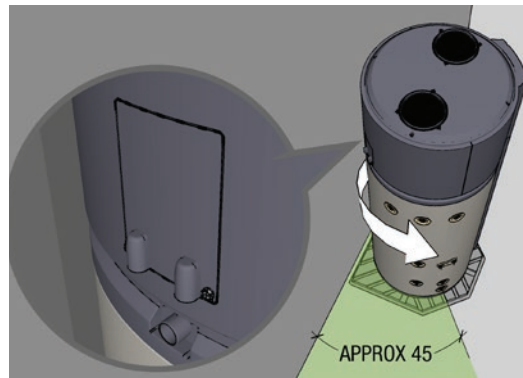

 
Rotate unit counterclockwise approx. 45° ensuring adequate access to electrical compartment at rear

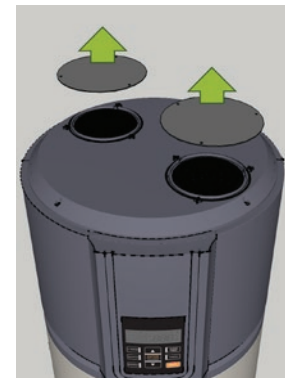


Remove vent covers for both inlet and outlet vents



 Fit the air filter to the inlet vent

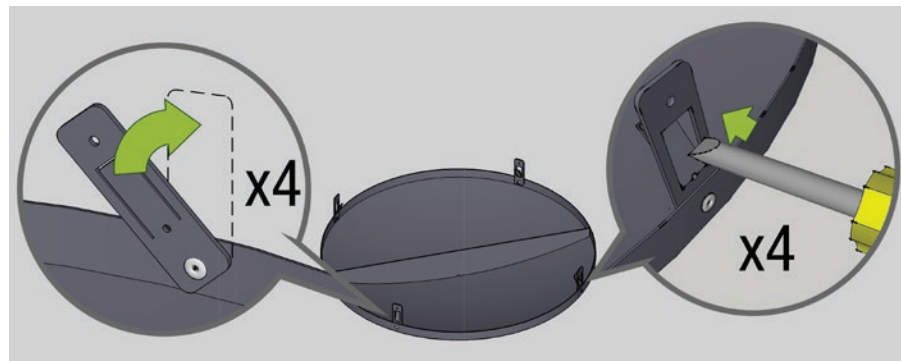

 
Locate rain cover & rotate 4 x legs to 90° and swing baffle down. Using a flat head screw driver push each tab in to an approx. 35° angle

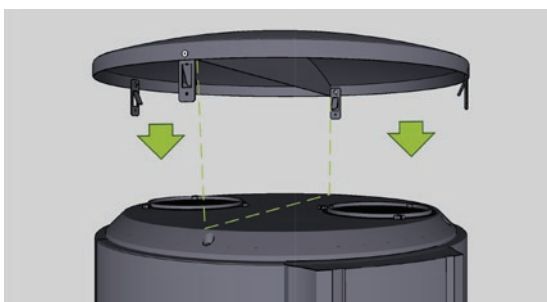


Position rain cover on top of the unit making sure the baffle is centred between the vents



 
Fix rain cover into position using suitable screws (4 locations)

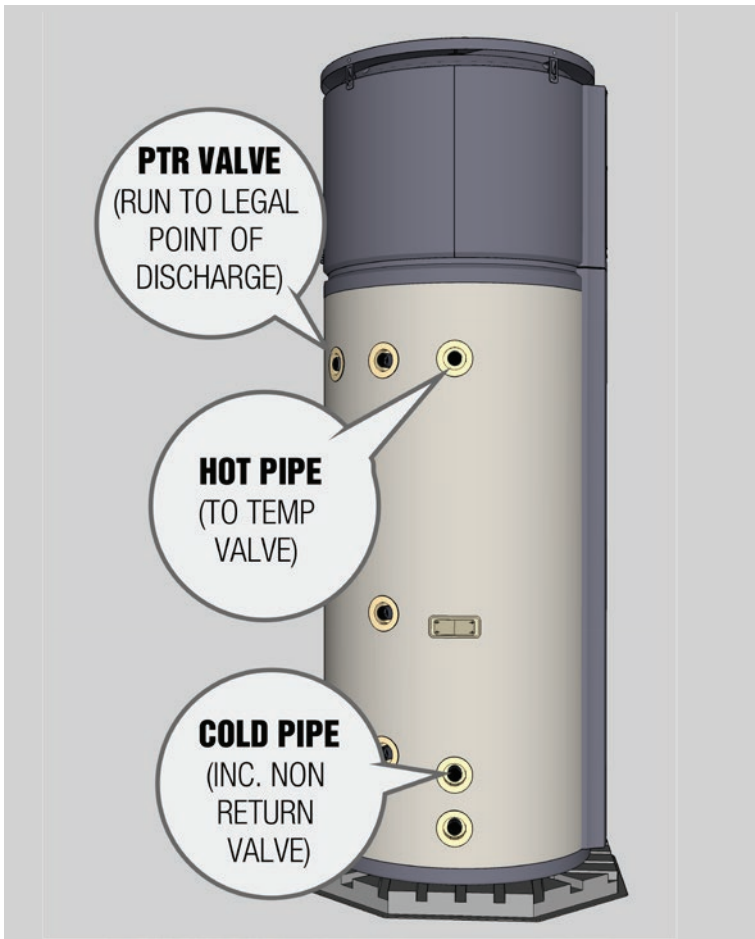

 Connect the hot pipe, cold pipe (ensure a non-return valve is used at the tank location) & connect the PTR valve (drain to legal point of discharge)

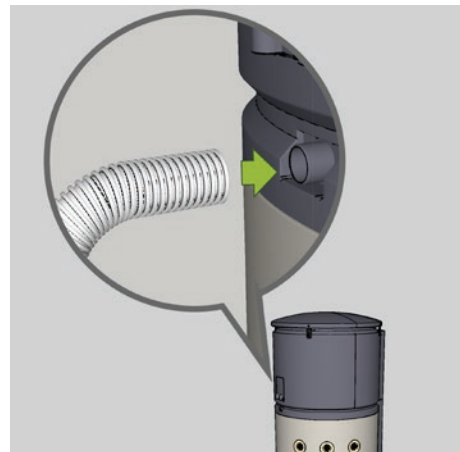

 
Connect the condensate hose to unit at rear position & run to suitable location.

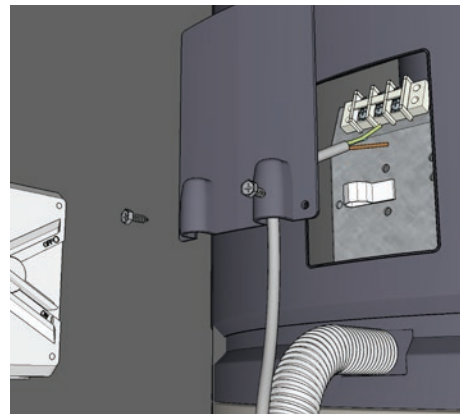

Wire electrics by accessing the electrical compartment and terminating at suitable isolating switch (By authorised electrician)



 
Fill heater with water and bleed air through unit by opening a hot water tap inside the house

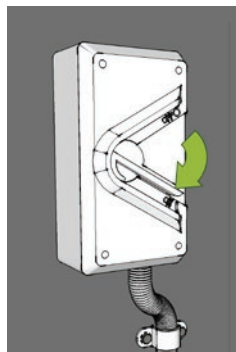

Switch Isolating switch to ON position



 Fit UV Screen shield to the control panel

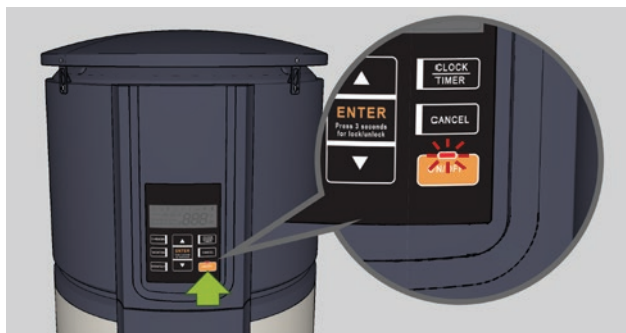

Turn heater on by pressing the on/off button (Ensure the red LED is lit up). Heater should start running

NOTE: In area's of high wind it is recommended the fascia cover be further secured with the supplied screws (Max 65mm length) at the positions indicated.

